

PAK1000 Series 1000W Programmable Power Supply



Features:

- Universal AC input / Full range
- Programmable output Voltage (30% ~ 105%)
- Programmable output Current (40% ~ 105%)
- +5V / 0.5A auxiliary output
- 1U profile, High power density 11.1W / in³
- Forced current sharing at parallel operation
- Power OK signal
- Remote ON / OFF, Remote sense function
- Protection: OVP, OLP, OTP, SCP, Fan failure




IEC62368-1

	MODEL	PAK1000-24	PAK1000-27	PAK1000-48
Output	DC Voltage Range	24V	27V	48V
	Rated Current	40A	37A	21A
	Current Range	0 ~ 40A	0 ~ 37A	0 ~ 21A
	Rated Power	1000W	1000W	1000W
	Ripple & Noise (Max.)	Note.2 <1%(mVp-p), according to the rated output voltage		
	Voltage Adj. Range	±5.0% Typical adjustment by potentiometer. (VR1)		
	Voltage Tolerance	Note.3 ±1.0%		
	Line Regulation	±0.5%		
	Load Regulation	±0.5%		
	Setup, Rise Time	800ms, 60ms at full load		
Hold Up Time (Typ.)	16ms / 230VAC at full load			
Input	Voltage Range	Note.4 90 ~ 264VAC, 127 ~ 370VDC		
	Frequency Range	47 ~ 63Hz		
	Power Factor (Typ.)	0.98 / 230VAC, 0.99 / 115VAC at full load		
	Efficiency (Typ.)	89%	89%	90%
	AC Current (Typ.)	12A / 115VAC, 5A / 230VAC		
	Inrush Current (Typ.)	27A / 115VAC, 54A / 230VAC		
	Leakage Current	< 1.0mA / 240VAC		
Protection	Over Load	105% rated output power Protection type: Total Power limit, Latch-style (Recovery after reset AC power ON or inhibit)		
	Over Voltage	Variable OVP, 125 ± 10% Vout. Protection type: Latch-style (Recovery after reset AC power ON or inhibit)		
	Over Temperature	By detecting primary and secondary heat sink. Protection type: Shut down o/p voltage (Recovers automatically after temperature goes down)		
	Auxiliary Power	5V / 0.5A (±3%)		
	Remote ON / OFF Control	External switch or NPN Transistor to turn ON / OFF		
Function	Power OK Signal	Open drain signal low when PSU turns on, Max. sink current: 20mA, Max. drain voltage: 40V.		
	Output Voltage Trim	Adjustment of output voltage is between 30 ~ 100% of rated output		
	Output Current Trim	Adjustment of output current is between 40 ~ 105% of rated output		
	Parallel (Current Sharing)	Note.5 Please refer to Function Manual		
	Environment	Working Temp.	-25 ~ +60°C (Refer to de-rating curve)	
Working Humidity		20 ~ 90% RH non-condensing		
Storage Temp. & Humidity		-40 ~ +85°C, 10 ~ 95% RH		
Temp. Coefficient		±0.02% / °C (0 ~ 50°C)		
Vibration		10 ~ 500Hz, 5G 10min. / 1cycle, period for 60min. each along X, Y, Z axes Compliance to IEC 68-2-6, IEC 68-2-64		
Safety & EMC	Safety Standards	Certified EN 62368-1; UL 62368-1		
	Withstand Voltage	Note.7 I/P-O/P: 3KVAC (4242VDC), I/P-FG: 1.5KVAC (2121VDC), O/P-FG: 0.5KVAC (707VDC)		
	Isolation Resistance	I/P-O/P, I/P-FG, O/P-FG: 100M Ohms / 500VDC		
	EMI Conduction & Radiation	Certified EN 55032		
	Power Harmonic & Voltage Fluctuation and Flicker	Certified EN 61000-3-2; EN 61000-3-3		
Note.6	EMS Immunity	Certified EN 55035: 2017 / A11: 2020; IEC 61000-4-2,3,4,5,6,8,11		
Others	MTBF	142.8K HRS Certified MIL-HDBK-217F		
	Cooling	Load and temperature control fan		
	Dimension (WxHxD)	127x41x283 mm / 5.00x1.61x11.14 inch		
	Packing	2.1kg; 9pcs / 19.9kg / 1.86CUFT		
Note	1. All parameters NOT specially mentioned are measured at 230VAC input, rated load and 25°C of ambient temperature. 2. Ripple & noise are measured at 20MHz of bandwidth by using a 12" twisted pair-wire terminated with a 0.1uF & 47uF parallel capacitor. 3. Tolerance: includes setup time tolerance, line regulation and load regulation. 4. De-rating may apply in low input voltage. Please check the de-rating curve for more details. 5. In parallel connection, only one unit will operate if the total output load is less than 5% of the rated load condition. 6. The power supply is considered a component which will be installed into a final equipment. The final equipment must be re-confirmed that it still meets EMC directives. 7. This test is done without enclosure: I/P-O/P 4242VDC. If with enclosure: I/P-O/P 2121VDC, I/P-FG: 2121VDC, O/P-FG: 707VDC			

REV: E7
23/12/21

Mechanical Drawings:

Unit:mm / inch

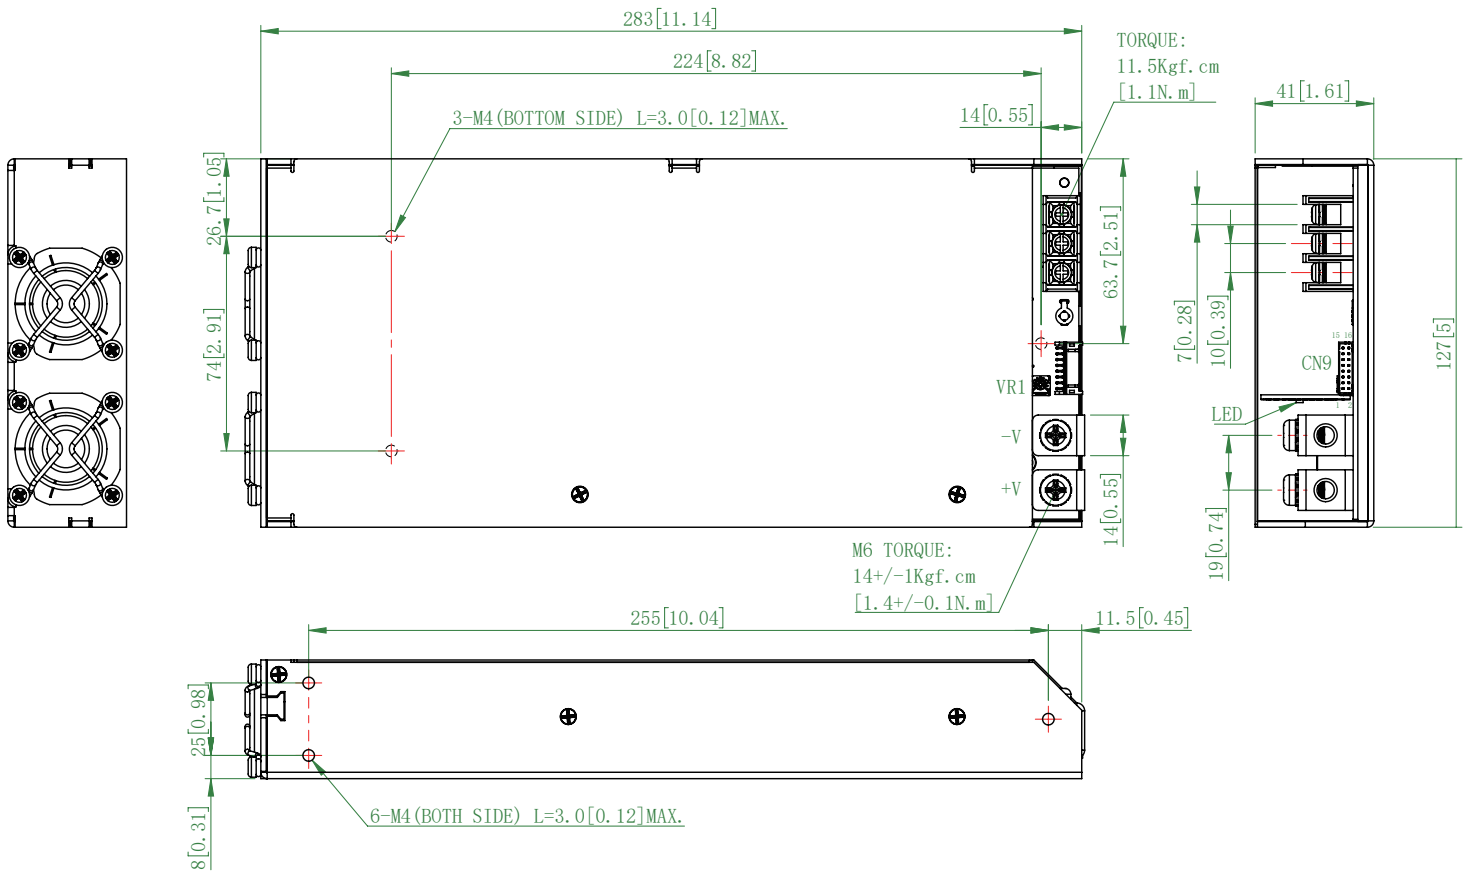

Recommended screw length is measured from the power supply surface

AC Input Terminal
Pin No. Assignment

Control pin number assignment (CN9): JST S16B-PHDSS or equivalent

Pin No.	Assignment
1	ACL
2	ACN
3	⏏

Pin No.	Assignment	Pin No.	Assignment	Pin No.	Assignment	Pin No.	Assignment	Mating Housing	Terminal
1	VS+	5	AUX	9	EN-	13	VCI	PHDR-16VS	SPHD-002T-P05
2	VO+	6	AUX	10	GND	14	GND		
3	VS-	7	EN+	11	P.OK	15	PAR		
4	VO-	8	GND	12	GND	16	ACI		



Function Description of CN9:

Pin No.	Function	Description
1	VS+	Remote voltage sense (+)
2	VO+	Local output voltage sense (+)
3	VS-	Remote voltage sense (-)
4	VO-	Local output voltage sense (-)
5,6	AUX	+5V / 0.5A Auxiliary power
7	EN+	Remote ON/OFF (+)
8,10,12,14	GND	Ground
9	EN-	Remote ON/OFF (-)
11	P.OK	Power OK
13	VCI	V Program
15	PAR	Parallel operation current share
16	ACI	I Program

LED Status:





Green LED	LED Signal	Status
Solid		Power OK
Slow Blink		Power Standby
Red LED	LED Signal	Status
Fast Blink		Over Voltage Protection (OVP)
Solid		Over Load Protection (OLP)
		Output Short Circuit Protection (SCP)
		Under Voltage Protection (UVP)
		Over Temperature Protection (OTP)
Slow Blink		Fan Failure
Intermittent Blink		Power Failure
Interface Blink		Power Failure

De-rating Curve:



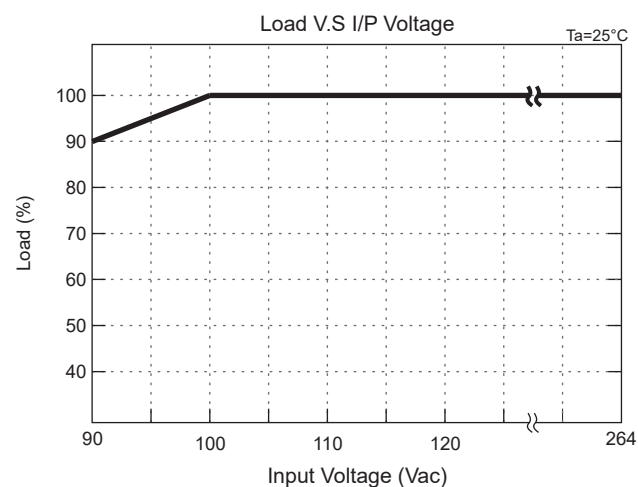
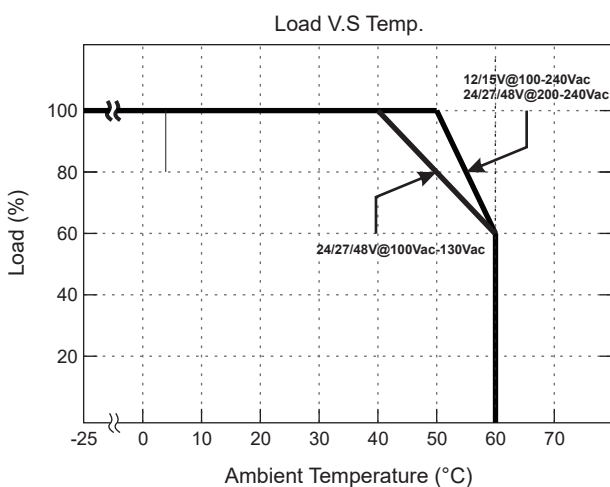


Function Manual:

1. Output Voltage Trim

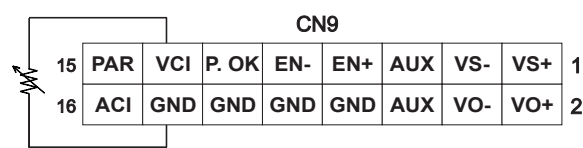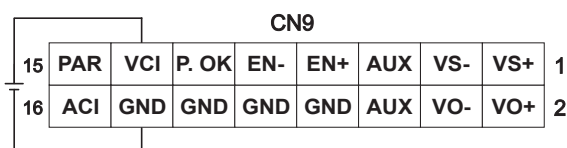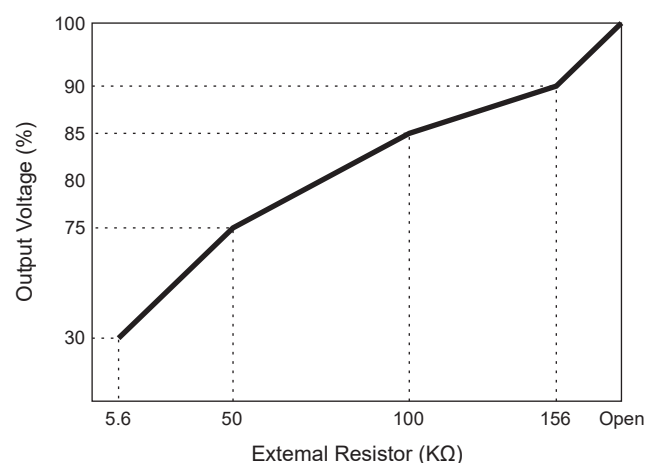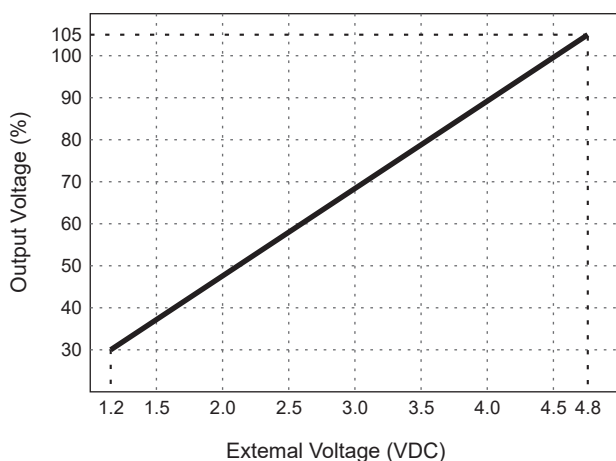


2. Output Current Trim (For Reference Only)

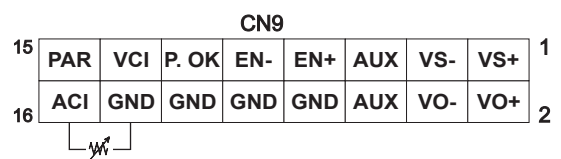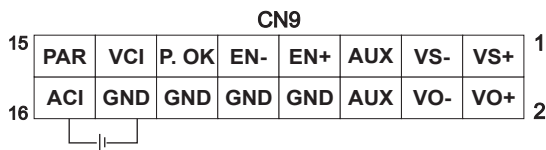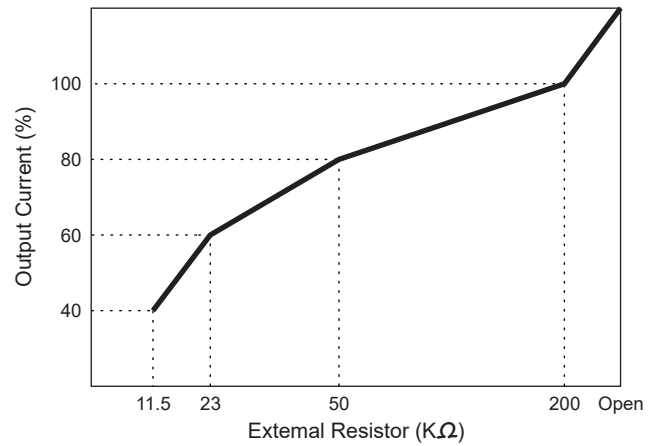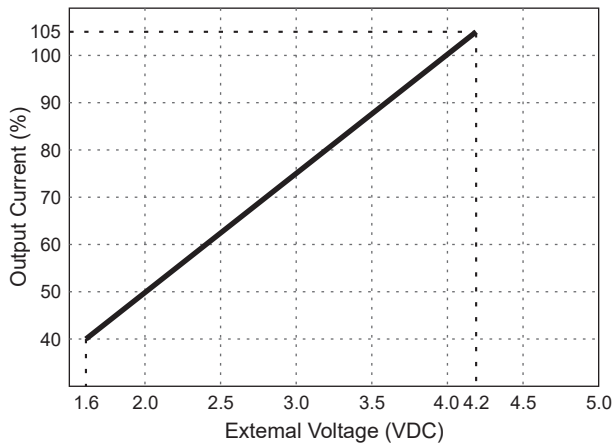


3. Remote ON/OFF

(A)

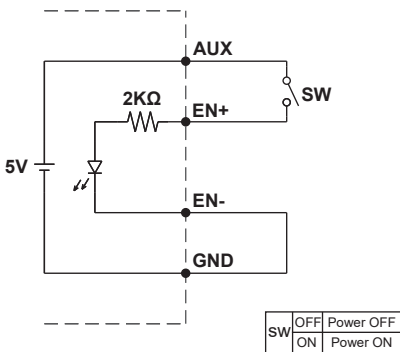


(A) Using internal 5V auxiliary source

(B)

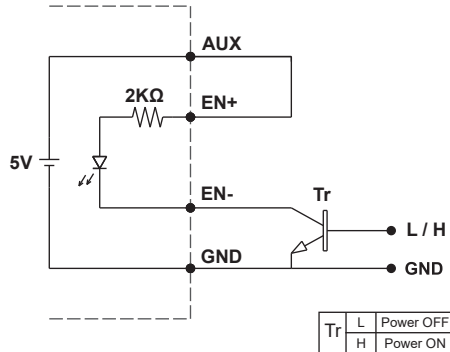


(B) ON / OFF Control by NPN transistor

(C)

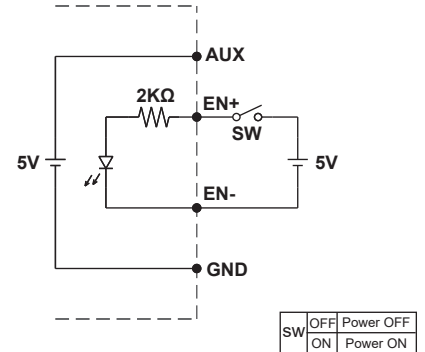


(C) Using external voltage source

4. Power OK Signal

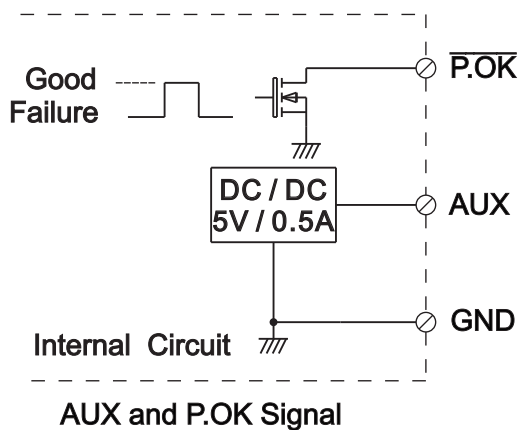


*Place an additional capacitor to have a better performance of auxiliary power operation.


*The grounding of "AUX" power should be connected to "GND" port. If "V-" is connected as Grounding, make sure to short the GND and V- ports.

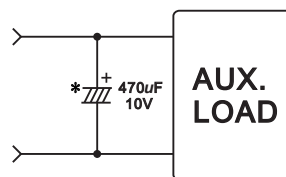


5. Remote Sense

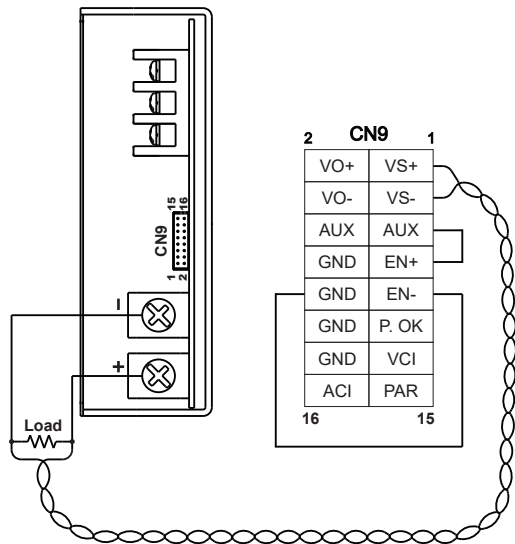

6. Local Sense

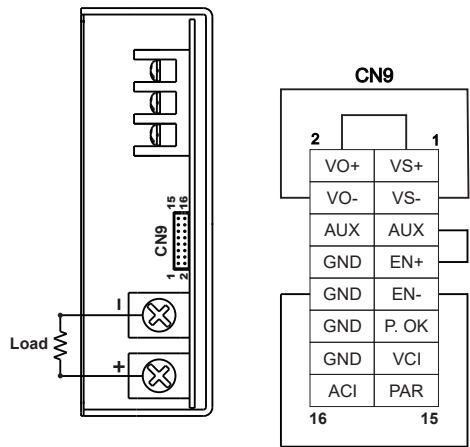


7. Current Sharing with Remote Sensing

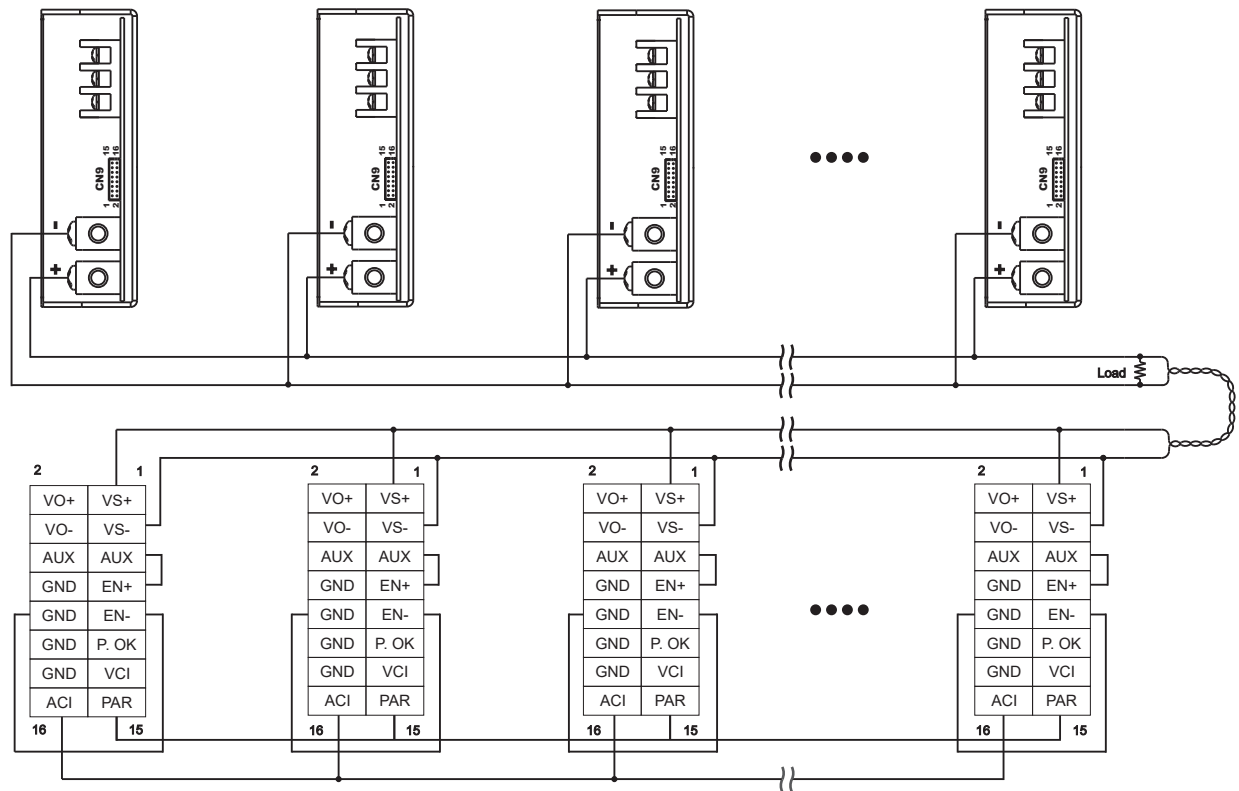

Please connect PAR pins together for current sharing function

8. Current Sharing with Local Sensing

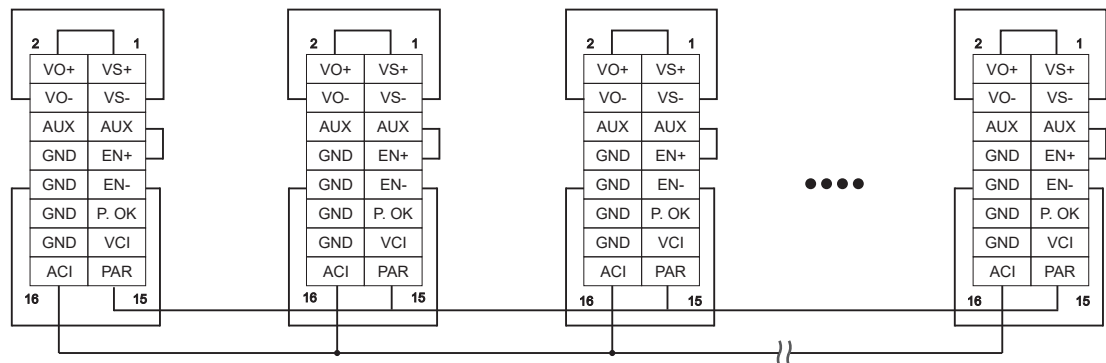


Please connect PAR pins together for current sharing function

Installation Instruction:

1. Mounting Directions

1-1 Recommended standard mounting methods:

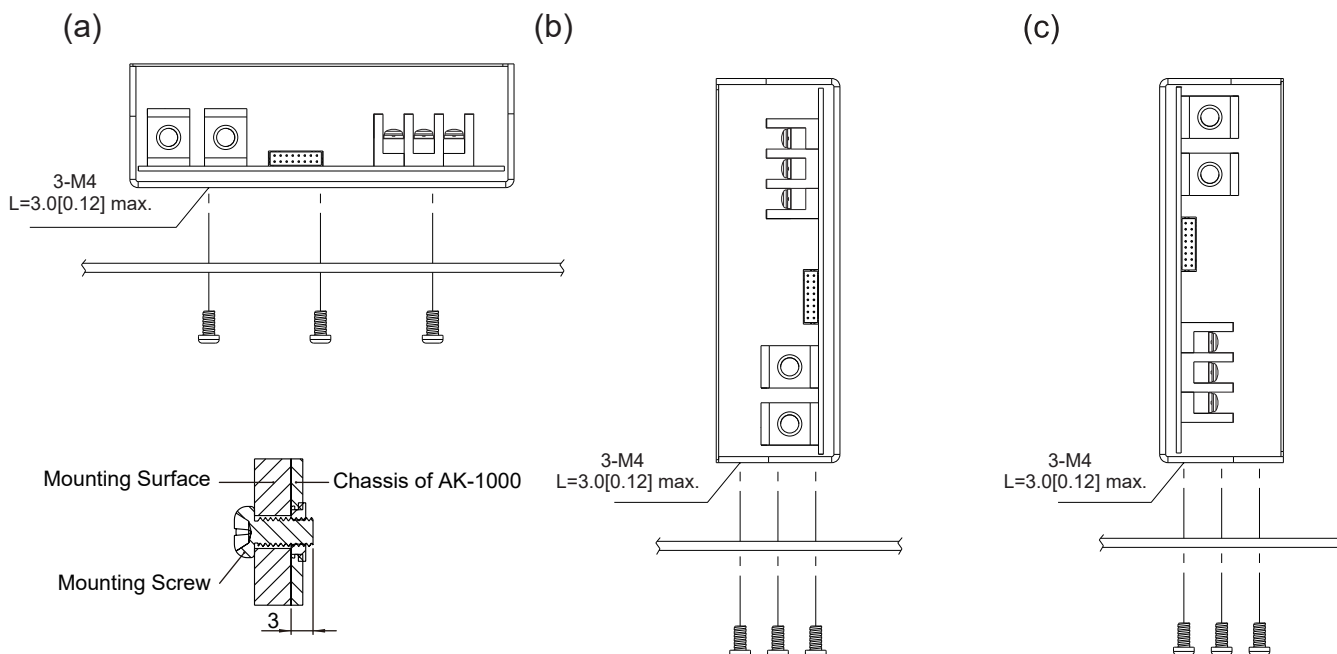

Recommended screw length is measured from the power supply surface

2. Mounting Method

2-1 There are ventilating holes on the front and back side panels, do not obstruct; allow 50mm at least for air flow.

2-2 The Maximum allowable penetration of screw is 3mm. Incomplete threading should not be penetrated.

2-3 Recommended the torque of mounting screw:
M4 screw: 1.27N • m (13.0kgf • cm)

